

SAFETY CHECKS - GENERAL

- ☒ EMERGENCY STOP
- ☒ MANUAL DESCENT
- ☒ AUXILIARY POWER
- ☒ NO UNAUTHORIZED MODS
- ☒ ALL REQUIRED MANUALS
- ☒ ALL SAFETY PLACARDS
- ☒ ALL INSTRUCTIONAL PLACARDS
- ☒ PAINT AND APPEARANCE
- ☒ ALL DOORS AND LATCHES
- ☒ ALL CHAINS AND BARS
- ☒ INSTRUMENTS AND GAUGES
- ☒ HORN
- ☒ LIGHTS
- ☒ LOAD CAPACITY MARKINGS
- ☒ ALL WARNING DEVICES
- ☒ PROTECTIVE BOOTS
- ☒ SEALED SWITCHES
- ☒ SEALED CONTROLS
- ☒ CONTROL BOX AND CABLE
- ☒ STRUCTURAL WELDS
- ☒ CONTROLS OPERATION
- ☒ AXLE/OUTRIGGERS
- ☒ EXTENSIONS/LOCKS
- ☒ FUNCTION CUTOUTS
- ☒ SPEED CUTOUTS
- ☒ PLATFORM SECURE
- ☒ WELDMENTS
- ☒ HOLDING VALVES
- ☒ GROUND CONTROLS AND BOX
- ☒ FOOTSWITCH
- ☒ STEERING AND AXLES

SAFETY CHECKS - GENERAL (CONT.)

- ☒ SHIELDS/NUTS/BOLTS
- ☒ PIVOT PINS
- ☒ CONSOLE DRAIN HOLES
- ☒ CONTROL VALVES
- ☒ DAILY CHECKLIST

SAFETY CHECKS - SCISSORS

- ☐ SCISSORS PINS AND BUSHINGS
- ☐ OSCILLATING AXLES
- ☐ ENABLE SWITCH
- ☐ PLATFORM RAILS AND PINS
- ☐ SCISSORS ARMS
- ☐ PLATFORM/DECK CONDITION

SAFETY CHECKS - BOOMS

- ☒ BASKET WELDS AND PINS
- ☒ PLATFORM AND BOOM LEVELING
- ☒ DRIVE AND SWING BRAKE
- ☒ BASKET CONDITION
- ☒ BOOM CHAINS AND WEAR PADS
- ☒ BOOM PINS
- ☒ POWERTRACK/CABLES
- ☒ SLAVE CYLINDER
- ☒ TELE. AND LIFT CYLINDERS
- NA BOOM SPROCKETS
- ☒ TURNTABLE

PM CHECKS

- ☐ ENGINE OIL LINES AND FITTINGS
- ☐ ENGINE OIL AND FILTER
- ☐ ENGINE IDLE/THROTTLE/RPM'S
- ☐ HYDRAULIC HOSES AND FITTINGS
- ☐ HYDRAULIC FLUID AND FILTER
- ☐ HYDRAULIC AND FUEL CAPS/VENTS
- ☐ FUEL AND AIR FILTERS
- ☐ COOLANT AND WATER
- ☐ GREASE AND LUBE
- ☐ EXHAUST SYSTEM
- ☐ TIRES/WHEELS/NUTS
- ☐ BATTERY AND CABLES
- ☐ CHARGER AND CHARGING SYSTEM
- ☐ WIRING AND CONNECTORS
- ☐ MOTORS
- ☐ TORQUE HUBS
- ☐ BRAKES
- ☐ NOTE ANY LEAKS BELOW

Seg 000 Gen

Seg 001 Gen REPAIR / INSTALL

Qty	Parts Used	Work Description
1		CHECK UNIT DIES AND WON'T RESTART
		CHECK THRU FUEL AND IGN SYSTEM
		NO POWER TO COIL
		TRACE DOWN WIRING, REPAIR WIRING AND INSTALL RELAY IN CIRCUIT
		CHECK OPERATION
1		RELAY
1		5 PIN RELAY

Seg 002 Gen

Seg 003 Gen

Seg 004 Gen

Seg 005 Gen

Seg 098 Gen

Seg 099 Gen

Seg 999

Qty	Parts Used	Work Description

☒ OK ☒ Active
☐ A Adjustments Made
☐ O Repair Needed
☐ R Repair Made
☐ NA Not Applicable

Authorized Signature Paul Kemner



 Thank You for your business; your technician was:
 BRIGHT, N

Phone (573) 221-5545

Cust PO

SAFETY CHECKS - GENERAL

- ☒ EMERGENCY STOP
- ☒ MANUAL DESCENT
- ☒ AUXILIARY POWER
- ☒ NO UNAUTHORIZED MODS
- ☒ ALL REQUIRED MANUALS
- ☒ ALL SAFETY PLACARDS
- ☒ ALL INSTRUCTIONAL PLACARDS
- ☒ PAINT AND APPEARANCE
- ☒ ALL DOORS AND LATCHES
- ☒ ALL CHAINS AND BARS
- ☒ INSTRUMENTS AND GAUGES
- ☒ HORN
- ☒ LIGHTS
- ☒ LOAD CAPACITY MARKINGS
- ☒ ALL WARNING DEVICES
- ☒ PROTECTIVE BOOTS
- ☒ SEALED SWITCHES
- ☒ SEALED CONTROLS
- ☒ CONTROL BOX AND CABLE
- ☒ STRUCTURAL WELDS
- ☒ CONTROLS OPERATION
- ☒ AXLE/OUTRIGGERS
- ☒ EXTENSIONS/LOCKS
- ☒ FUNCTION CUTOUTS
- ☒ SPEED CUTOUTS
- ☒ PLATFORM SECURE
- ☒ WELDMENTS
- ☒ HOLDING VALVES
- ☒ GROUND CONTROLS AND BOX
- ☒ FOOTSWITCH
- ☒ STEERING AND AXLES

SAFETY CHECKS - GENERAL (CONT.)

- ☒ SHIELDS/NUTS/BOLTS
- ☒ PIVOT PINS
- ☒ CONSOLE DRAIN HOLES
- ☒ CONTROL VALVES
- ☒ DAILY CHECKLIST

SAFETY CHECKS - SCISSORS

- ☐ SCISSORS PINS AND BUSHINGS
- ☐ OSCILLATING AXLES
- ☐ ENABLE SWITCH
- ☐ PLATFORM RAILS AND PINS
- ☐ SCISSORS ARMS
- ☐ PLATFORM/DECK CONDITION

SAFETY CHECKS - BOOMS

- ☒ BASKET WELDS AND PINS
- ☒ PLATFORM AND BOOM LEVELING
- ☒ DRIVE AND SWING BRAKE
- ☒ BASKET CONDITION
- ☒ BOOM CHAINS AND WEAR PADS
- ☒ BOOM PINS
- ☒ POWERTRACK/CABLES
- ☒ SLAVE CYLINDER
- ☒ TELE. AND LIFT CYLINDERS
- NA BOOM SPROCKETS
- ☒ TURNTABLE

PM CHECKS

- ☐ ENGINE OIL LINES AND FITTINGS
- ☐ ENGINE OIL AND FILTER
- ☐ ENGINE IDLE/THROTTLE/RPM'S
- ☐ HYDRAULIC HOSES AND FITTINGS
- ☐ HYDRAULIC FLUID AND FILTER
- ☐ HYDRAULIC AND FUEL CAPS/VENTS
- ☐ FUEL AND AIR FILTERS
- ☐ COOLANT AND WATER
- ☐ GREASE AND LUBE
- ☐ EXHAUST SYSTEM
- ☐ TIRES/WHEELS/NUTS
- ☐ BATTERY AND CABLES
- ☐ CHARGER AND CHARGING SYSTEM
- ☐ WIRING AND CONNECTORS
- ☐ MOTORS
- ☐ TORQUE HUBS
- ☐ BRAKES
- ☐ NOTE ANY LEAKS BELOW

Seg 000 Gen

Seg 001 Gen REPAIR / INSTALL

Qty	Parts Used	Work Description
		8/5 CHECK RUNS BAD, ENGINE MISS CHECK AND REPLACE SPARK PLUGS CLEAN AND ADJUST CARB CHECK OPERATION
		8/17 CHECK RUNNING BAD, BLOWS BLACK SMOKE CLEAN AND TRY TO ADJUST CARB CARB WON'T HOLD ADJUSTMENT ORDER NEW CARB REPLACE CARB REPLACE SPARK PLUGS (GAS FOULED) CHECK OPERATION
1	7019988	CARBURETOR
4		SPARK PLUG
1		PARTS - FREIGHT IN
4		SPARK PLUGS

Seg 002 Gen

Seg 003 Gen

Seg 004 Gen

Seg 005 Gen

Seg 098 Gen

Seg 099 Gen

Seg 999

Qty	Parts Used	Work Description
-----	------------	------------------

X	OK	X	Active
A	Adjustments Made		
O	Repair Needed		
R	Repair Made		
NA	Not Applicable		

Authorized Signature Paul Kemner



Thank You for your business; your technician was:

BRIGHT, N

Phone (573) 221-5545

Cust PO

SAFETY CHECKS - GENERAL

- ☒ EMERGENCY STOP
- ☐ NA MANUAL DESCENT
- ☒ AUXILIARY POWER
- ☒ NO UNAUTHORIZED MODS
- ☒ ALL REQUIRED MANUALS
- ☒ ALL SAFETY PLACARDS
- ☒ ALL INSTRUCTIONAL PLACARDS
- ☒ PAINT AND APPEARANCE
- ☒ ALL DOORS AND LATCHES
- ☒ ALL CHAINS AND BARS
- ☒ INSTRUMENTS AND GAUGES
- ☒ HORN
- ☒ LIGHTS
- ☒ LOAD CAPACITY MARKINGS
- ☒ ALL WARNING DEVICES
- ☒ PROTECTIVE BOOTS
- ☒ SEALED SWITCHES
- ☒ SEALED CONTROLS
- ☒ CONTROL BOX AND CABLE
- ☒ STRUCTURAL WELDS
- ☒ CONTROLS OPERATION
- ☒ AXLE/OUTRIGGERS
- ☒ EXTENSIONS/LOCKS
- ☒ FUNCTION CUTOUTS
- ☒ SPEED CUTOUTS
- ☒ PLATFORM SECURE
- ☒ WELDMENTS
- ☒ HOLDING VALVES
- ☒ GROUND CONTROLS AND BOX
- ☒ FOOTSWITCH
- ☒ STEERING AND AXLES

SAFETY CHECKS - GENERAL (CONT.)

- ☒ SHIELDS/NUTS/BOLTS
- ☒ PIVOT PINS
- ☒ CONSOLE DRAIN HOLES
- ☒ CONTROL VALVES
- ☒ DAILY CHECKLIST

SAFETY CHECKS - SCISSORS

- ☐ SCISSORS PINS AND BUSHINGS
- ☐ OSCILLATING AXLES
- ☐ ENABLE SWITCH
- ☐ PLATFORM RAILS AND PINS
- ☐ SCISSORS ARMS
- ☐ PLATFORM/DECK CONDITION

SAFETY CHECKS - BOOMS

- ☒ BASKET WELDS AND PINS
- ☒ PLATFORM AND BOOM LEVELING
- ☒ DRIVE AND SWING BRAKE
- ☒ BASKET CONDITION
- ☒ BOOM CHAINS AND WEAR PADS
- ☒ BOOM PINS
- ☒ POWERTRACK/CABLES
- ☒ SLAVE CYLINDER
- ☒ TELE. AND LIFT CYLINDERS
- ☐ NA BOOM SPROCKETS
- ☒ TURNTABLE

PM CHECKS

- ☐ ENGINE OIL LINES AND FITTINGS
- ☐ ENGINE OIL AND FILTER
- ☐ ENGINE IDLE/THROTTLE/RPM'S
- ☐ HYDRAULIC HOSES AND FITTINGS
- ☐ HYDRAULIC FLUID AND FILTER
- ☐ HYDRAULIC AND FUEL CAPS/VENTS
- ☐ FUEL AND AIR FILTERS
- ☐ COOLANT AND WATER
- ☐ GREASE AND LUBE
- ☐ EXHAUST SYSTEM
- ☐ TIRES/WHEELS/NUTS
- ☐ BATTERY AND CABLES
- ☐ CHARGER AND CHARGING SYSTEM
- ☐ WIRING AND CONNECTORS
- ☐ MOTORS
- ☐ TORQUE HUBS
- ☐ BRAKES
- ☐ NOTE ANY LEAKS BELOW

Seg 000 Gen

Seg 001 Gen REMOVE / REPLACE

Qty	Parts Used	Work Description
1		CHECK DIES OUT UNDER LOAD
1		CHECK THRU FUEL SYSTEM
		FUEL PUMP WEAK
		REPLACE FUEL PUMP AND FILTER
		CHEK OPERATION
		IN-LINE FUEL FILTER
		PUMP

Seg 002 Gen

Seg 003 Gen

Seg 004 Gen

Seg 005 Gen

Seg 098 Gen

Seg 099 Gen

☒ OK ☒ Active
☐ A Adjustments Made
☐ O Repair Needed
☐ R Repair Made
☐ NA Not Applicable

Authorized Signature Paul Kemner

W

Thank You for your business; your technician was:
BRIGHT, N

Phone (573) 221-5545

Cust PO

SAFETY CHECKS - GENERAL

- ☒ EMERGENCY STOP
- ☒ MANUAL DESCENT
- ☒ AUXILIARY POWER
- ☒ NO UNAUTHORIZED MODS
- ☒ ALL REQUIRED MANUALS
- ☒ ALL SAFETY PLACARDS
- ☒ ALL INSTRUCTIONAL PLACARDS
- ☒ PAINT AND APPEARANCE
- ☒ ALL DOORS AND LATCHES
- ☒ ALL CHAINS AND BARS
- ☒ INSTRUMENTS AND GAUGES
- ☒ HORN
- ☒ LIGHTS
- ☒ LOAD CAPACITY MARKINGS
- ☒ ALL WARNING DEVICES
- ☒ PROTECTIVE BOOTS
- ☒ SEALED SWITCHES
- ☒ SEALED CONTROLS
- ☒ CONTROL BOX AND CABLE
- ☒ STRUCTURAL WELDS
- ☒ CONTROLS OPERATION
- ☒ AXLE/OUTRIGGERS
- ☒ EXTENSIONS/LOCKS
- ☒ FUNCTION CUTOUTS
- ☒ SPEED CUTOUTS
- ☒ PLATFORM SECURE
- ☒ WELDMENTS
- ☒ HOLDING VALVES
- ☒ GROUND CONTROLS AND BOX
- ☒ FOOTSWITCH
- ☒ STEERING AND AXLES

SAFETY CHECKS - GENERAL (CONT.)

- ☒ SHIELDS/NUTS/BOLTS
- ☒ PIVOT PINS
- ☒ CONSOLE DRAIN HOLES
- ☒ CONTROL VALVES
- ☒ DAILY CHECKLIST

SAFETY CHECKS - SCISSORS

- ☐ SCISSORS PINS AND BUSHINGS
- ☐ OSCILLATING AXLES
- ☐ ENABLE SWITCH
- ☐ PLATFORM RAILS AND PINS
- ☐ SCISSORS ARMS
- ☐ PLATFORM/DECK CONDITION

SAFETY CHECKS - BOOMS

- ☒ BASKET WELDS AND PINS
- ☒ PLATFORM AND BOOM LEVELING
- ☒ DRIVE AND SWING BRAKE
- ☒ BASKET CONDITION
- ☒ BOOM CHAINS AND WEAR PADS
- ☒ BOOM PINS
- ☒ POWERTRACK/CABLES
- ☒ SLAVE CYLINDER
- ☒ TELE. AND LIFT CYLINDERS
- NA BOOM SPROCKETS
- ☒ TURNTABLE

PM CHECKS

- ☒ ENGINE OIL LINES AND FITTINGS
- ☒ ENGINE OIL AND FILTER
- ☒ ENGINE IDLE/THROTTLE/RPM'S
- ☒ HYDRAULIC HOSES AND FITTINGS
- ☒ HYDRAULIC FLUID AND FILTER
- ☒ HYDRAULIC AND FUEL CAPS/VENTS
- ☒ FUEL AND AIR FILTERS
- ☒ COOLANT AND WATER
- ☒ GREASE AND LUBE
- ☒ EXHAUST SYSTEM
- ☒ TIRES/WHEELS/NUTS
- ☒ BATTERY AND CABLES
- ☒ CHARGER AND CHARGING SYSTEM
- ☒ WIRING AND CONNECTORS
- ☒ MOTORS
- ☒ TORQUE HUBS
- ☒ BRAKES
- NA NOTE ANY LEAKS BELOW

Seg 000 Uns PLANNED MAINTENANCE (PM)

Qty	Parts Used	Work Description
		PM
1	0364464	FILTER ASSY.
1	EXXN112828	15W40 1 GAL
1	EXXN112617	15W40 1 QUAR

Seg 001 Gen

Seg 002 Gen

Seg 003 Gen

Seg 004 Gen

Seg 005 Gen

Seg 098 Gen

Seg 099 Gen

☒ OK ☒ Active
☐ A Adjustments Made
☐ O Repair Needed
☐ R Repair Made
☐ NA Not Applicable

Authorized Signature

PAUL KEMNER

W.B.

Thank You for your business; your technician was:

BRIGHT, N

Phone (573) 221-5545

Cust PO

SAFETY CHECKS - GENERAL

- ☒ EMERGENCY STOP
- ☒ MANUAL DESCENT
- ☒ AUXILIARY POWER
- ☒ NO UNAUTHORIZED MODS
- ☒ ALL REQUIRED MANUALS
- ☒ ALL SAFETY PLACARDS
- ☒ ALL INSTRUCTIONAL PLACARDS
- ☒ PAINT AND APPEARANCE
- ☒ ALL DOORS AND LATCHES
- ☒ ALL CHAINS AND BARS
- ☒ INSTRUMENTS AND GAUGES
- ☒ HORN
- ☒ LIGHTS
- ☒ LOAD CAPACITY MARKINGS
- ☒ ALL WARNING DEVICES
- ☒ PROTECTIVE BOOTS
- ☒ SEALED SWITCHES
- ☒ SEALED CONTROLS
- ☒ CONTROL BOX AND CABLE
- ☒ STRUCTURAL WELDS
- ☒ CONTROLS OPERATION
- ☒ AXLE/OUTRIGGERS
- ☒ EXTENSIONS/LOCKS
- ☒ FUNCTION CUTOUTS
- ☒ SPEED CUTOUTS
- ☒ PLATFORM SECURE
- ☒ WELDMENTS
- ☒ HOLDING VALVES
- ☒ GROUND CONTROLS AND BOX
- ☒ FOOTSWITCH
- ☒ STEERING AND AXLES

SAFETY CHECKS - GENERAL (CONT.)

- ☒ SHIELDS/NUTS/BOLTS
- ☒ PIVOT PINS
- ☒ CONSOLE DRAIN HOLES
- ☒ CONTROL VALVES
- ☒ DAILY CHECKLIST

SAFETY CHECKS - SCISSORS

- ☐ SCISSORS PINS AND BUSHINGS
- ☐ OSCILLATING AXLES
- ☐ ENABLE SWITCH
- ☐ PLATFORM RAILS AND PINS
- ☐ SCISSORS ARMS
- ☐ PLATFORM/DECK CONDITION

SAFETY CHECKS - BOOMS

- ☒ BASKET WELDS AND PINS
- ☒ PLATFORM AND BOOM LEVELING
- ☒ DRIVE AND SWING BRAKE
- ☒ BASKET CONDITION
- ☒ BOOM CHAINS AND WEAR PADS
- ☒ BOOM PINS
- ☒ POWERTRACK/CABLES
- ☒ SLAVE CYLINDER
- ☒ TELE. AND LIFT CYLINDERS
- ☒ BOOM SPROCKETS
- ☒ TURNTABLE

PM CHECKS

- ☐ ENGINE OIL LINES AND FITTINGS
- ☐ ENGINE OIL AND FILTER
- ☐ ENGINE IDLE/THROTTLE/RPM'S
- ☐ HYDRAULIC HOSES AND FITTINGS
- ☐ HYDRAULIC FLUID AND FILTER
- ☐ HYDRAULIC AND FUEL CAPS/VENTS
- ☐ FUEL AND AIR FILTERS
- ☐ COOLANT AND WATER
- ☐ GREASE AND LUBE
- ☐ EXHAUST SYSTEM
- ☐ TIRES/WHEELS/NUTS
- ☐ BATTERY AND CABLES
- ☐ CHARGER AND CHARGING SYSTEM
- ☐ WIRING AND CONNECTORS
- ☐ MOTORS
- ☐ TORQUE HUBS
- ☐ BRAKES
- ☐ NOTE ANY LEAKS BELOW

Seg 000 Gen

Seg 001 Gen TROUBLESHOOT / DIAGNOSE

Qty	Parts Used	Work Description
		S/C. T/S. FOUND FUEL SHUT-OFF SOLENOID BAD. ORDERED PARTS.
		INSTALLED PARTS. UNIT HAD OTHER PROBLEMS. T/S. R&R FUEL FILTERS &
		START RELAY. FOUND BROKEN WIRES. FIXED WIRING. UNIT WOULDN'T START.
		T/S. FOUND STARTER BAD. ORDERED STARTER. INSTALLED STARTER &
		TESTED. OK.
1	7000884	FUEL SHUTOFF
1	SYSN0126	STARTER - NEW
1	0972313	SWITCH,PRESS
1	2910503	SWITCH, OIL
1	4360065	SWITCH, LO
3		PARTS - FREIGHT IN
0		PARTS - FREIGHT IN
4		SPARK PLUG
0		PARTS - FREIGHT IN
2		FUEL FILTER
0		FUEL FILTER
3		FUEL FILTER
0		FUEL FILTER
1		RELAY
0		FUEL FILTER

Seg 002 Gen

Seg 003 Gen

Seg 004 Gen

Seg 005 Gen

Seg 098 Gen

Seg 099 Gen

☒ OK ☒ Active
☐ A Adjustments Made
☐ O Repair Needed
☐ R Repair Made
☐ NA Not Applicable

Authorized Signature DAVID JONES

David by C.P.

Thank You for your business; your technician was:

PEITER, CARL

Phone (573) 221-5545

Cust PO

SAFETY CHECKS - GENERAL

- ☒ EMERGENCY STOP
- ☐ NA MANUAL DESCENT
- ☒ AUXILIARY POWER
- ☒ NO UNAUTHORIZED MODS
- ☒ ALL REQUIRED MANUALS
- ☒ ALL SAFETY PLACARDS
- ☒ ALL INSTRUCTIONAL PLACARDS
- ☒ PAINT AND APPEARANCE
- ☒ ALL DOORS AND LATCHES
- ☒ ALL CHAINS AND BARS
- ☒ INSTRUMENTS AND GAUGES
- ☒ HORN
- ☒ LIGHTS
- ☒ LOAD CAPACITY MARKINGS
- ☒ ALL WARNING DEVICES
- ☒ PROTECTIVE BOOTS
- ☒ SEALED SWITCHES
- ☒ SEALED CONTROLS
- ☒ CONTROL BOX AND CABLE
- ☒ STRUCTURAL WELDS
- ☒ CONTROLS OPERATION
- ☒ AXLE/OUTRIGGERS
- ☒ EXTENSIONS/LOCKS
- ☒ FUNCTION CUTOUTS
- ☒ SPEED CUTOUTS
- ☒ PLATFORM SECURE
- ☒ WELDMENTS
- ☒ HOLDING VALVES
- ☒ GROUND CONTROLS AND BOX
- ☒ FOOTSWITCH
- ☒ STEERING AND AXLES

SAFETY CHECKS - GENERAL (CONT.)

- ☒ SHIELDS/NUTS/BOLTS
- ☒ PIVOT PINS
- ☒ CONSOLE DRAIN HOLES
- ☒ CONTROL VALVES
- ☒ DAILY CHECKLIST

SAFETY CHECKS - SCISSORS

- ☐ SCISSORS PINS AND BUSHINGS
- ☐ OSCILLATING AXLES
- ☐ ENABLE SWITCH
- ☐ PLATFORM RAILS AND PINS
- ☐ SCISSORS ARMS
- ☐ PLATFORM/DECK CONDITION

SAFETY CHECKS - BOOMS

- ☒ BASKET WELDS AND PINS
- ☒ PLATFORM AND BOOM LEVELING
- ☒ DRIVE AND SWING BRAKE
- ☒ BASKET CONDITION
- ☒ BOOM CHAINS AND WEAR PADS
- ☒ BOOM PINS
- ☒ POWERTRACK/CABLES
- ☒ SLAVE CYLINDER
- ☒ TELE. AND LIFT CYLINDERS
- ☐ NA BOOM SPROCKETS
- ☒ TURNTABLE

PM CHECKS

- ☐ ENGINE OIL LINES AND FITTINGS
- ☐ ENGINE OIL AND FILTER
- ☐ ENGINE IDLE/THROTTLE/RPM'S
- ☐ HYDRAULIC HOSES AND FITTINGS
- ☐ HYDRAULIC FLUID AND FILTER
- ☐ HYDRAULIC AND FUEL CAPS/VENTS
- ☐ FUEL AND AIR FILTERS
- ☐ COOLANT AND WATER
- ☐ GREASE AND LUBE
- ☐ EXHAUST SYSTEM
- ☐ TIRES/WHEELS/NUTS
- ☐ BATTERY AND CABLES
- ☐ CHARGER AND CHARGING SYSTEM
- ☐ WIRING AND CONNECTORS
- ☐ MOTORS
- ☐ TORQUE HUBS
- ☐ BRAKES
- ☐ NOTE ANY LEAKS BELOW

Seg 000 Gen

Seg 001 Gen REMOVE / REPLACE

Qty	Parts Used	Work Description
		CHECK NO BASKET ROTATE RIGHT
		SWITCH BAD
		REPLACE SWITCH
		CHECK OPERATION
1	JL4360202S	SWITCH - TOGGLE SEALED
1		PARTS - FREIGHT IN

Seg 002 Gen

Seg 003 Gen

Seg 004 Gen

Seg 005 Gen

Seg 098 Gen

Seg 099 Gen

Seg 999

Qty	Parts Used	Work Description

☒ OK ☒ Active
☒ Adjustments Made
☐ Repair Needed
☒ Repair Made
☐ Not Applicable

Authorized Signature Paul Kemner

Thank You for your business; your technician was:

BRIGHT, N

Phone (573) 221-5545

Cust PO